
 




## **HOW TO FIT RP3**

- Seal must be fitted to the front face of inward opening doors.
- Note: If one side of RP3 is hard to seal, then lower RP3 on the fixing screws.

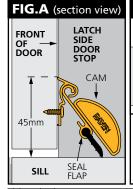



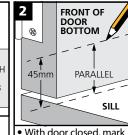


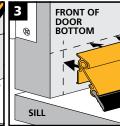


• With door closed, measure front of door between door stops. Cut seal with a hacksaw to measurement less 3mm for clearance on latch side. Note: If door is less than 650mm wide, trim equal amounts from each end to avoid mechanism damage. 385mm is the minimum operable size.

• With door closed, mark line on front of door bottom, parallel to and 45mm up from door

 Position top edge of seal on marked line and firm against hinge side

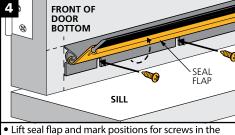

- middle of the fixing slots.
- Remove RP3 and in the marked screw positions, fix the four short screws in half way. Reposition RP3 on screws and fully tighten.

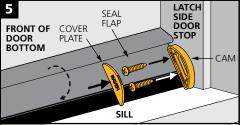

- With door closed, position cam to the latch side door stop so it lightly closes seal flap (FIG.A).
- With long screw, fix cam in top of slot. Adjust as necessary then fix in bottom slot with 2nd screw.
- Check sealing action then snap in cover plate.