


# FITTING INSTRUCTIONS

## RP143 - Replacement Roller-Door Seal



### HOW TO FIT RP143



1:1 Seal Profile Laid Flat


#### RP143 Replacement Roller-Door seal for B&D doors made before 1997

For a close fit, RP143 should be similar to your existing seal so it can slide in channel and hold firm.

**1**


**IMPORTANT:**  
Before opening pack, compare your existing B&D roller-door seal to the RP143 profile above.

**2**

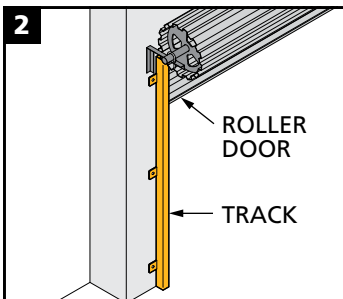


- Push the roller-door up. For automatic doors, unplug the electric power to the motor first.
- Unbolt and remove the track opposite the motor to access old seal.

**3**

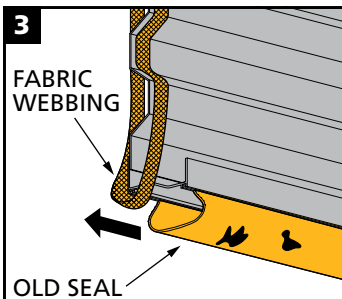

- Temporarily move the fabric webbing out of the way.
- Pull out the old seal.

**4**

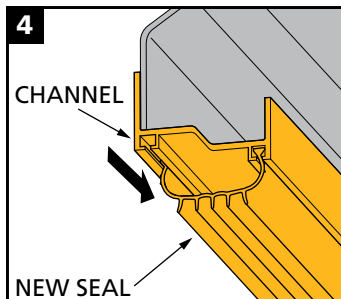

- Add a drop of detergent in each side of the channel and slide new seal in and trim to suit.
- Reposition fabric webbing and bolt track back into place.